


Sun Shade

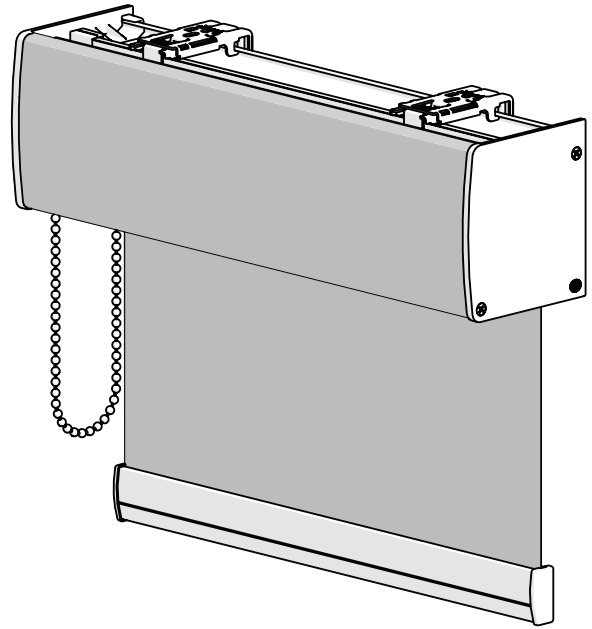


Cassette System

Installation


Nice

Tools Needed

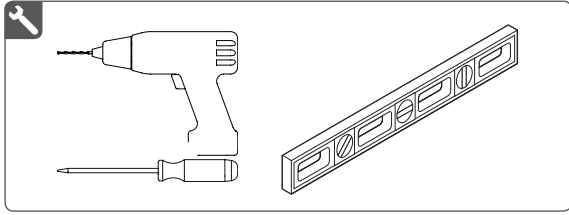

INSTALLATION

Step 1: Measure the correct spacing.

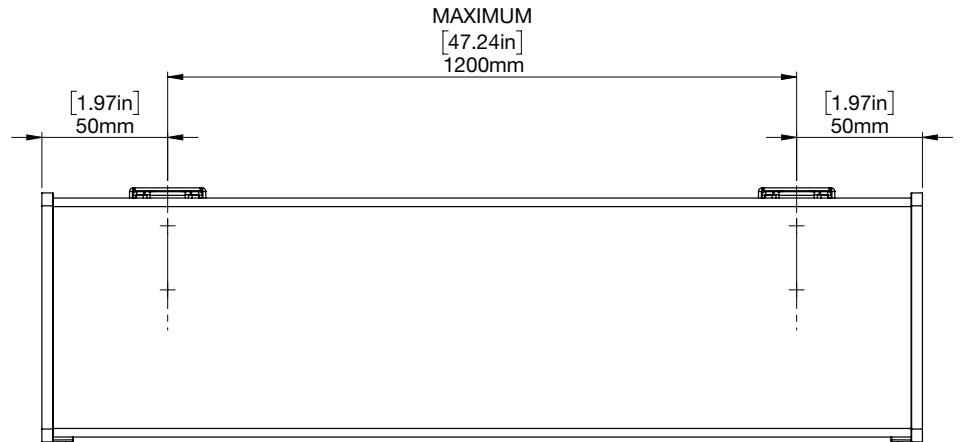

Step 2: Install the brackets.


FACE FIX | WALL MOUNT

TOP FIX | CEILING MOUNT


NOTE: Be certain to level the brackets. If not leveled, the fabric will not roll properly.



Step 3: Attach the semi-cassette assembly to the brackets.

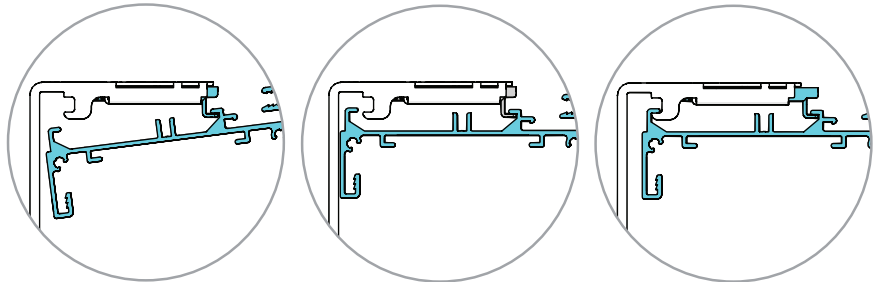

Completed installation.

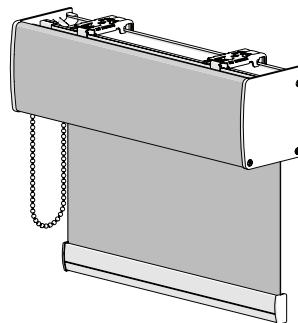

Nice

Niceforyou.com

©2023 Nice North America LLC.
All rights reserved.

Technical Support:
800-421-1587

Technical Support Hours:
M – F, 6am – 4pm PST

Nice North America
c/o Customer Service
5919 Sea Otter Place, Ste. 100
Carlsbad, CA 92010

10033837 Rev-A